

TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**


NOTE: BEFORE STARTING DISCONNECT BATTERY AND ALWAYS WEAR PROPER SAFETY EQUIPMENT WHILE WORKING



STEP 1: USING A 1/2" SOCKET WRENCH REMOVE FLOOR MOUNTING BOLTS AND PLACE TO THE SIDE




STEP 2: DISCONNECT THE SEAT BELT SENSOR UNDER THE SEAT BEFORE REMOVING SEAT FROM VEHICLE.

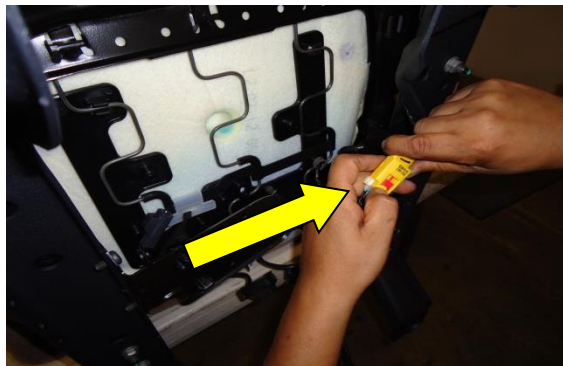


STEP 3: DISCONNECT ALL OTHER CABLES UNDER THE SEAT. (SEAT HEATER, AIR BAG, SEAT BELT SENSOR)



STEP 4: MOVE ADJUSTERS TO THE REAR POSITION AND UNBOLT THE (4) FRONT ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.

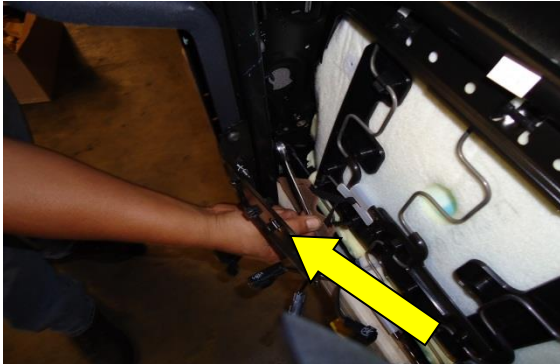
TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 5: MOVE ADJUSTERS TO THE FORWARD POSITION AND UNBOLT THE (4) REAR ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.

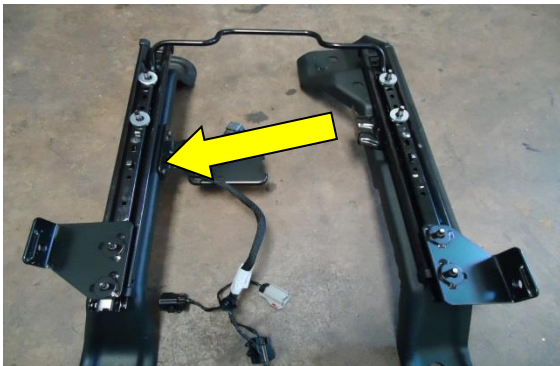

STEP 6: REMOVE FACTORY ADJUSTERS FROM FACTORY SEAT AND PLACE TO THE SIDE. DISCONNECT REMAINING SENSOR FROM THE ADJUSTERS AND RETAIN FOR LATER USE.

NOTE: WILL NEED TO REMOVE FACTORY BRACKET BEFORE INSTALLING MASTERCRAFT SEATS.

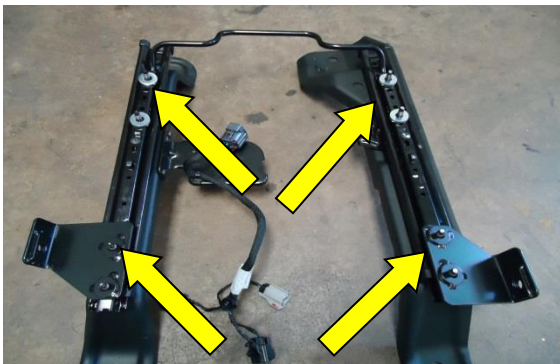

STEP 7: PLACE THE (4) SPACERS ON THE FRONT MOUNTING BOLTS, THEN THE LARGER BRACKET ON THE OUTBOARD SIDE OF THE ADJUSTER AND THE SMALLER BRACKET ON THE INBOARD SIDE.




STEP 8: PLACE THE ADJUSTERS ONTO THE MASTERCRAFT SEAT AND HAND TIGHTEN NUTS.

NOTE: BEFORE TIGHTENING BOLTS ON ADJUSTER RUN THE SENSOR CABLE FOR THE SEAT BELT BETWEEN THE ADJUSTER AND THE SEAT.

TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 9: BEFORE ATTACHING SEAT BELT RECIEVER TO THE INBOARD SIDE OF THE SEAT, TAB MUST BE BENT FLAT.

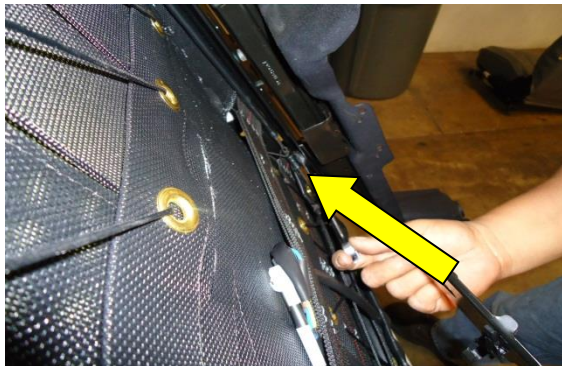

STEP 10: MOVE ADJUSTERS TO THE FORWARD POSITION AND TIGHTEN REAR NUTS THEN MOVE ADJUSTERS TO THE REAR POSITION AND TIGHTEN FRONT NUTS.



STEP 11: CONNECT THE SEAT BELT SENSOR DEVICE TO THE CABLES AND USING ZIP TIES ATTACH THE LOOSE CABLES TO THE SEAT.



STEP 12: PLACE SEAT IN VEHICLE AND LINE UP MOUNTING HOLES TO MOUNTS AND CONNECT THE SENSOR CABLES.

TITLE: **INSTALLATION INSTRUCTION**PART #: **624405**DESCRIPTION: **2007 - 2012 JK DRIVER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 13: USING A 1/2" SOCKET WRENCH
TIGHTEN FLOOR MOUNTING BOLTS.



STEP 14: BEFORE ATTACHING SHOULDER
HARNESS TO THE OUTBOARD SIDE OF THE
SEAT, TAB MUST BE BENT FLAT.



STEP 15: USING A 7/16" X 3/4" BOLT
SUPPLIED IN KIT, ATTACH THE SHOULDER
HARNESS TO THE OUTBOARD BRACKET.

**CAUTION: SEATS SHOULD BE INSTALLED BY A TRAINED PROFESSIONAL MECHANIC.
PLEASE CALL IF YOU HAVE ANY QUESTIONS.**

MASTERCRAFT SAFETY 800-565-4042

Limited Warranty – Mastercraft Safety products warrants to the original purchaser that all products purchased will be free from defects in the materials and workmanship for 12 months from purchase date. Mastercraft will repair or replace at our option any parts found defective within the limited warranty period. This warranty does not cover labor or freight charges that may be incurred. All returns must have prior authorization and proof of purchase. This warranty does not cover products subjected to accidents, negligence, alterations, abuse, or improper installation. No warranty or representation is made to these products ability to protect the user from injury or death. Be advised that automobile racing and other forms of motorsports are dangerous and products are subject to failure when exposed to the high stress that is involved. The user assumes that risk and all responsibilities.