


TITLE: **INSTALLATION INSTRUCTION**PART #: **624406**DESCRIPTION: **2007 - 2012 JK PASSENGER ADAPTER KIT**DATE: **NOV 11, 2011**

**NOTE: BEFORE STARTING DISCONNECT BATTERY AND ALWAYS WEAR PROPER SAFETY EQUIPMENT WHILE WORKING**

**STEP 1: USING A 1/2" SOCKET WRENCH REMOVE FLOOR MOUNTING BOLTS AND PLACE TO THE SIDE**



**STEP 2: DISCONNECT THE SEAT BELT SENSOR UNDER THE SEAT BEFORE REMOVING SEAT FROM VEHICLE.**

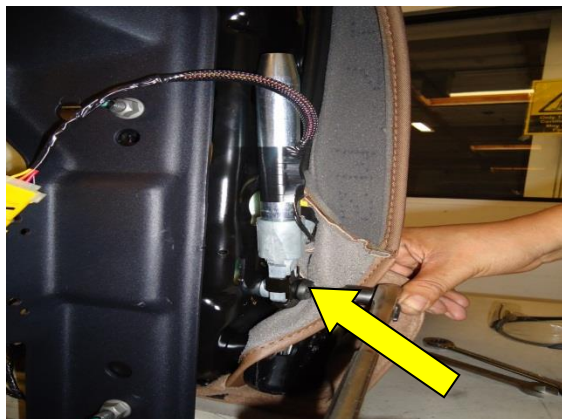


**STEP 3: DISCONNECT ALL OTHER CABLES AND UNBOLT THE SEAT BELT SENSOR DEVICE AND PLACE IT TO THE SIDE.**


**NOTE: THIS STEP IS FOR 2011 - 2012 JEEPS, CONTINUE ON TO THE NEXT STEP IF INSTALLING IN A 2007 - 2010.**



**STEP 4: MOVE ADJUSTERS TO THE REAR POSITION AND UNBOLT THE (2) FRONT ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.**

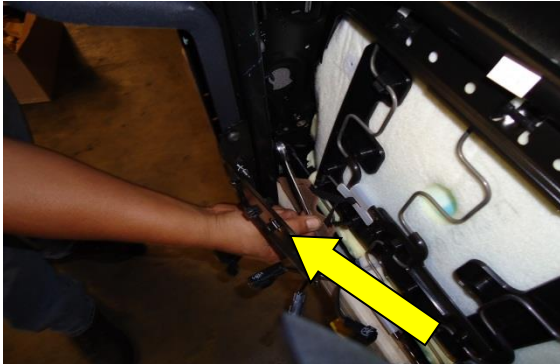TITLE: **INSTALLATION INSTRUCTION**PART #: **624406**DESCRIPTION: **2007 - 2012 JK PASSENGER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 5: MOVE ADJUSTERS TO THE FORWARD POSITION AND UNBOLT THE (4) REAR ADJUSTER NUTS. RETAIN THE NUTS FOR LATER USE.

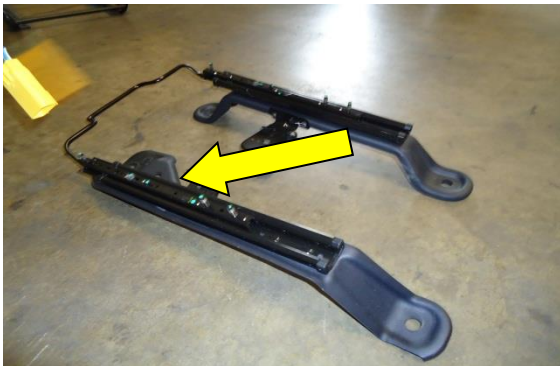

STEP 6: REMOVE FACTORY ADJUSTERS FROM FACTORY SEAT AND PLACE TO THE SIDE. DISCONNECT REMAINING SENSOR FROM THE ADJUSTERS AND RETAIN FOR LATER USE.

**NOTE: WILL NEED TO REMOVE FACTORY BRACKET BEFORE INSTALLING MASTERCRAFT SEATS.**



STEP 7: PLACE THE (2) SPACERS ON THE FRONT MOUNTING BOLTS, THEN THE LARGER BRACKET ON THE OUTBOARD SIDE OF THE ADJUSTER AND THE SMALLER BRACKET ON THE INBOARD SIDE.

**NOTE: WHEN INSTALLING MASTERCRAFT SEATS INTO A 2011 – 2012 JEEP, YOU MUST USE THE BRACKET LABELED “USE FOR 2011 AND UP ONLY”. OTHERWISE USE OTHER BRACKET.**




STEP 8: PLACE THE ADJUSTERS ONTO THE MASTERCRAFT SEAT AND HAND TIGHTEN NUTS.

**NOTE: BEFORE TIGHTENING BOLTS ON ADJUSTER RUN THE SENSOR CABLE FOR THE SEAT BELT SENSOR DEVICE BETWEEN THE ADJUSTER AND THE SEAT.**


TITLE: **INSTALLATION INSTRUCTION**PART #: **624406**DESCRIPTION: **2007 - 2012 JK PASSENGER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 9: AFTER TIGHTENING ADJUSTERS, INSTALL THE SEAT BELT SENSOR DEVICE USING THE 7/16" X 1-1/4" BOLT SUPPLIED IN THE KIT.

**NOTE: THIS STEP IS FOR 2011 – 2012 JEEPS, CONTINUE ON TO THE NEXT STEP IF INSTALLING IN A 2007 – 2010.**

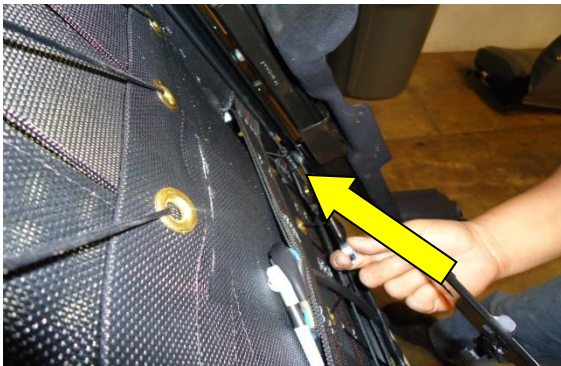

STEP 10: MOVE ADJUSTERS TO THE FORWARD POSITION AND TIGHTEN REAR NUTS THEN MOVE ADJUSTERS TO THE REAR POSITION AND TIGHTEN FRONT NUTS.

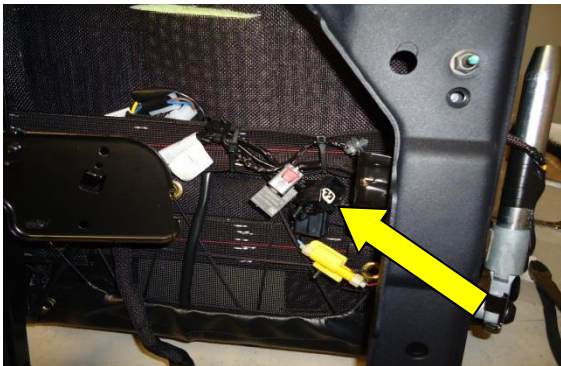

STEP 11: CONNECT THE SEAT BELT SENSOR DEVICE TO THE CABLES AND USING ZIP TIES ATTACH THE LOOSE CABLES TO THE SEAT.



STEP 12: PLACE SEAT IN VEHICLE AND LINE UP MOUNTING HOLES TO MOUNTS AND CONNECT THE SENSOR CABLES.

TITLE: **INSTALLATION INSTRUCTION**PART #: **624406**DESCRIPTION: **2007 - 2012 JK PASSENGER ADAPTER KIT**DATE: **NOV 11, 2011**

STEP 13: USING A 1/2" SOCKET WRENCH  
TIGHTEN FLOOR MOUNTING BOLTS.



STEP 14: BEFORE ATTACHING SHOULDER  
HARNESS TO THE OUTBOARD SIDE OF THE  
SEAT, TAB MUST BE BENT FLAT.



STEP 15: USING A 7/16" X 3/4" BOLT  
SUPPLIED IN KIT, ATTACH THE SHOULDER  
HARNESS TO THE OUTBOARD BRACKET.

**CAUTION: SEATS SHOULD BE INSTALLED BY A TRAINED PROFESSIONAL MECHANIC.  
PLEASE CALL IF YOU HAVE ANY QUESTIONS.**

**MASTERCRAFT SAFETY 800-565-4042**

Limited Warranty – Mastercraft Safety products warrants to the original purchaser that all products purchased will be free from defects in the materials and workmanship for 12 months from purchase date. Mastercraft will repair or replace at our option any parts found defective within the limited warranty period. This warranty does not cover labor or freight charges that may be incurred. All returns must have prior authorization and proof of purchase. This warranty does not cover products subjected to accidents, negligence, alterations, abuse, or improper installation. No warranty or representation is made to these products ability to protect the user from injury or death. Be advised that automobile racing and other forms of motorsports are dangerous and products are subject to failure when exposed to the high stress that is involved. The user assumes that risk and all responsibilities.